

VONTRON HOR2012-50 RO Element

Brief Introduction


Independently developed by VONTRON, the RO element HOR2012-50 is designed for treatment of water resources containing oxidant substances and high microbe contaminations. Working under extra low pressure, it is applicable to water purifying devices for residence, hospital and laboratory.

Model	Permeate flow (GPD)	Rejection Rate (%)	Min. Rejection (%)
HOR2012-50	50	98.0	96.0

Testing Conditions:

Testing Pressure 60 psi (0.41MPa)
 Temperature of Testing Solution 25°C
 Concentration of Testing Solution (NaCl) 250 ppm
 pH of Testing Solution 6.5~8.5
 Recovery of Single Element.....15%

Size of Membrane Element: 1.0 inch=25.4 mm

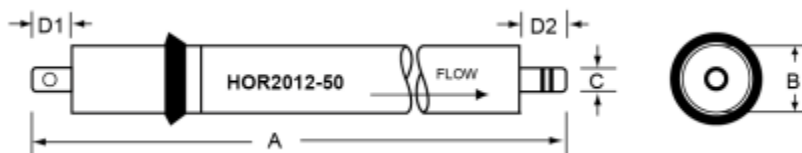

A/mm(inch)	B/mm(inch)	C/mm(inch)	D1/mm(inch)	D2/mm(inch)
298.0	48.0	17.0	21.0	21.0

Notice:

1. Any specific application must be limited within the Operating Limits and Conditions. We strongly recommend you to refer to the latest edition of technology manual and design guide prepared by VONTRON Technology Co., Ltd., or consult experts proficient in membrane technology. In case the customer failed to follow the specified operational requirements in the manual, VONTRON Technology Co., Ltd. will assume no liability for all results.
2. The permeate flow listed in the table is the average value. The permeate flow of single membrane element is within a tolerance not exceeding $\pm 20\%$ of the nominal value.
3. Discharge the permeate water produced during the first hour after system start-up.
4. During storage time and operation time, it is strictly prohibited to dose any chemical medicament that may be harmful to membrane elements. VONTRON Technology Co., Ltd. assumes no liabilities for any above-mentioned misconduct.

5. Moisture and pollution should be avoided in transportation. Handle with care to prevent damage. This product should be stored in a ventilated and dry warehouse and should not be stored with corrosive articles and inflammables.

6. Dry membrane elements should always be kept wet after been used. When wet membrane elements are not used for a long time, in order to prevent the growth of microorganisms, it is recommended to soak the membrane elements with a protective solution containing 1.0% sodium bisulfite (food-grade) (prepared with RO water).